


In-Wall Installation Instructions

(SINKMIŞER Sink Installation)

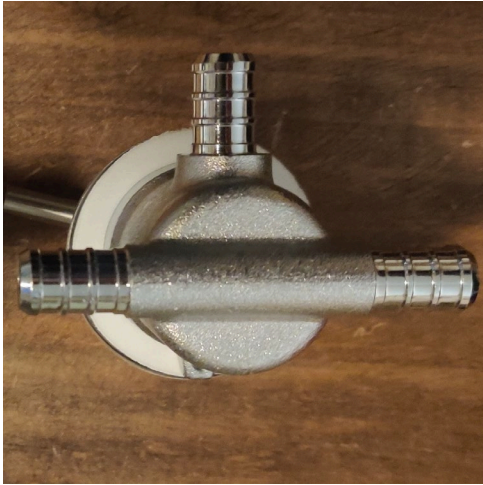

The SINKMIŞER (on the back) has Three ports.

The one ports is for the hot water input, it is positioned separate from the other two. It connects to the hot water line leading to the sink faucet.

The other set (two ports) are your output ports, and are positioned together in a straight line on the very bottom of the valve. The two outputs are as follows (**order can be changed**). 1) The Left port goes to the hot water faucet ON/OFF (Tap) control. 2) The right port goes to the input to either of the 1/2" sides of the

provided clear plastic tee. The other side of the tee goes to your return line and back to your fresh water storage tank (Fill Line, Breath Line or Drain Line are recommended connection locations).

The valve handle side goes through the sink counter (25/32" hole) where the handle (Provided on the unit) is reinstalled.

Magic Mushroom installation onto Aqua View Tee

- 1) Screw 3/4" Lock Nut onto 3/4" male thread of the Tee. Make sure the flat side is facing out toward end of the threads. Screw it all the way down until it stops.
- 2) Slide Rubber washer over 3/4" threads and press against lock nut.
- 3) Then wrap 2 to 3 turns of Teflon tape on the 3/4" end of the Tee.
- 4) Insert Tee into predrilled 1 3/8" hole in sink counter.



- 5) Screw Magic Mushroom onto the 3/4" Thread. Turn Magic Mushroom until snug then turn slightly more until Aqua View logo is parallel to the sink counter.

HAND TIGHTEN ONLY!

- 6) Screw 3/4" Lock nut under the sink until sung against the bottom side of counter.

HAND TIGHTEN ONLY!

